ROPER™ Home Appliances

COOKTOP AND CONTROL PANEL PARTS

For Model: FGP335BW1, FGP335BL1
(White) (Almond)

30" GAS FREESTANDING RANGE ELECTRONIC IGNITION

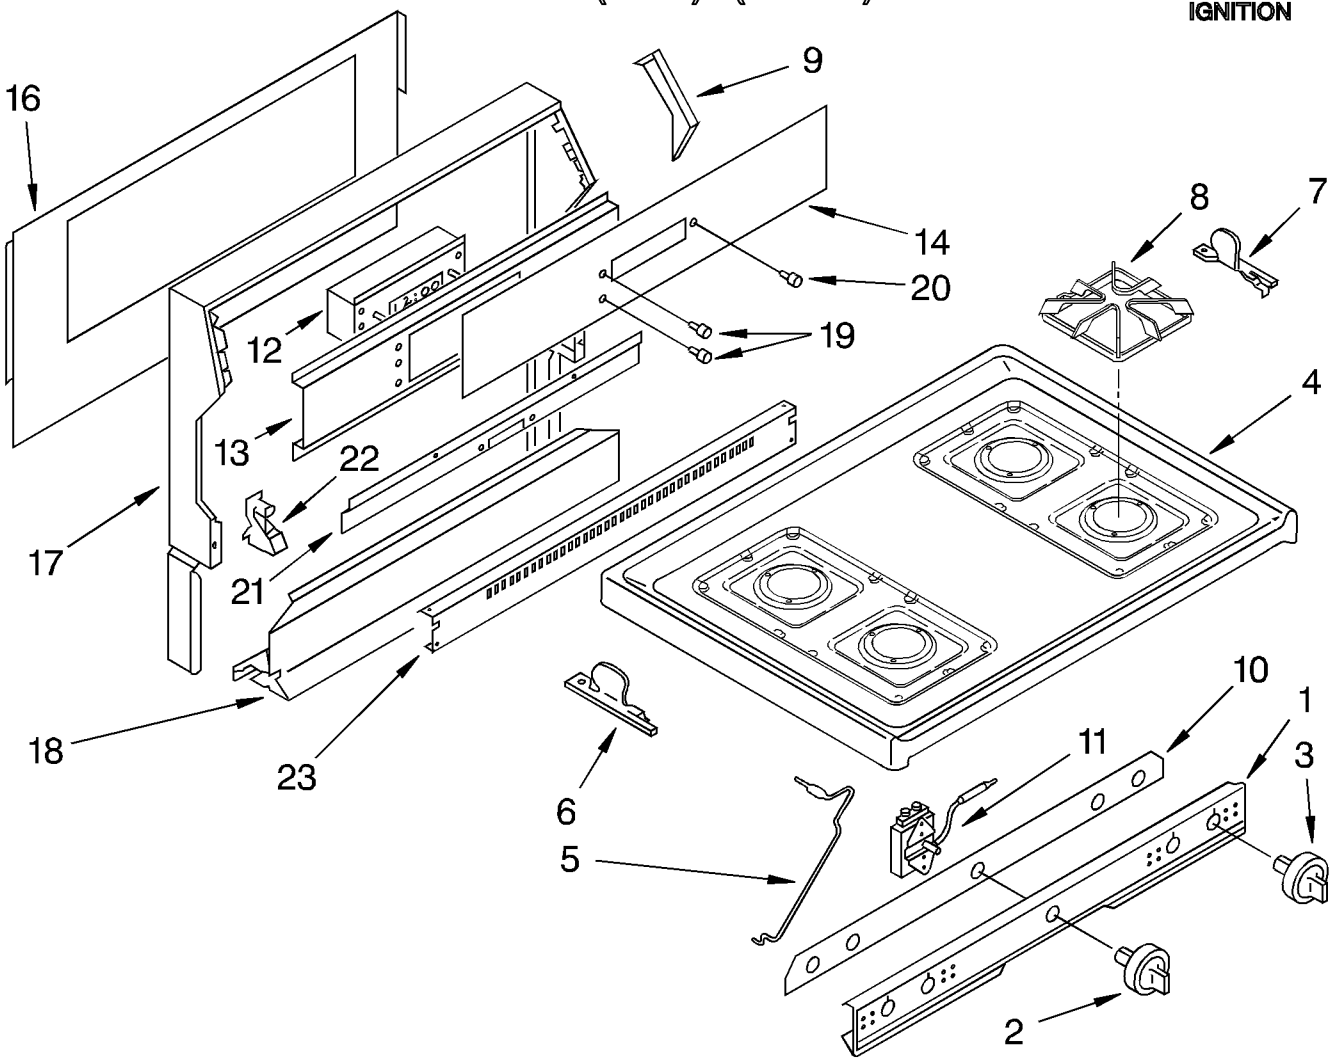

1	4371294	Panel, Control
2	4371302	Knob, Thermostat
3	4371492	Knob, Burner (4)
4		Top, Main
	4371064	White
	4371065	Almond
5	4371039	Rod,Support
6	816586	Bracket,Top LH
7	816721	Bracket,Top RH
8	4371474	Grate,Burner (4)
9		Cap, End
	4371316	R.H.
	4371317	L.H.
10	4371287	Cover,Manifold
11	4371308	Thermostat
12	4371327	Clock
13	4371319	Bracket, Clock
14	4371321	Panel, Control
16	4371300	Panel, Rear Upper
17	4371512	Trim, Panel
18	4371315	Panel, Splash
19	4371318	Button, Hour/Minute (2)
20	4371513	Button, Clock/Timer
21	4371320	Bracket, Timer
22	816702	Support, Back
23	816707	Trim, Vent

LITERATURE PARTS

	LIT4372266	Guide, Use & Care
	LIT4372193	Installation, Instructions

MANIFOLD PARTS

For Model: FGP335BW1, FGP335BL1
(White) (Almond)

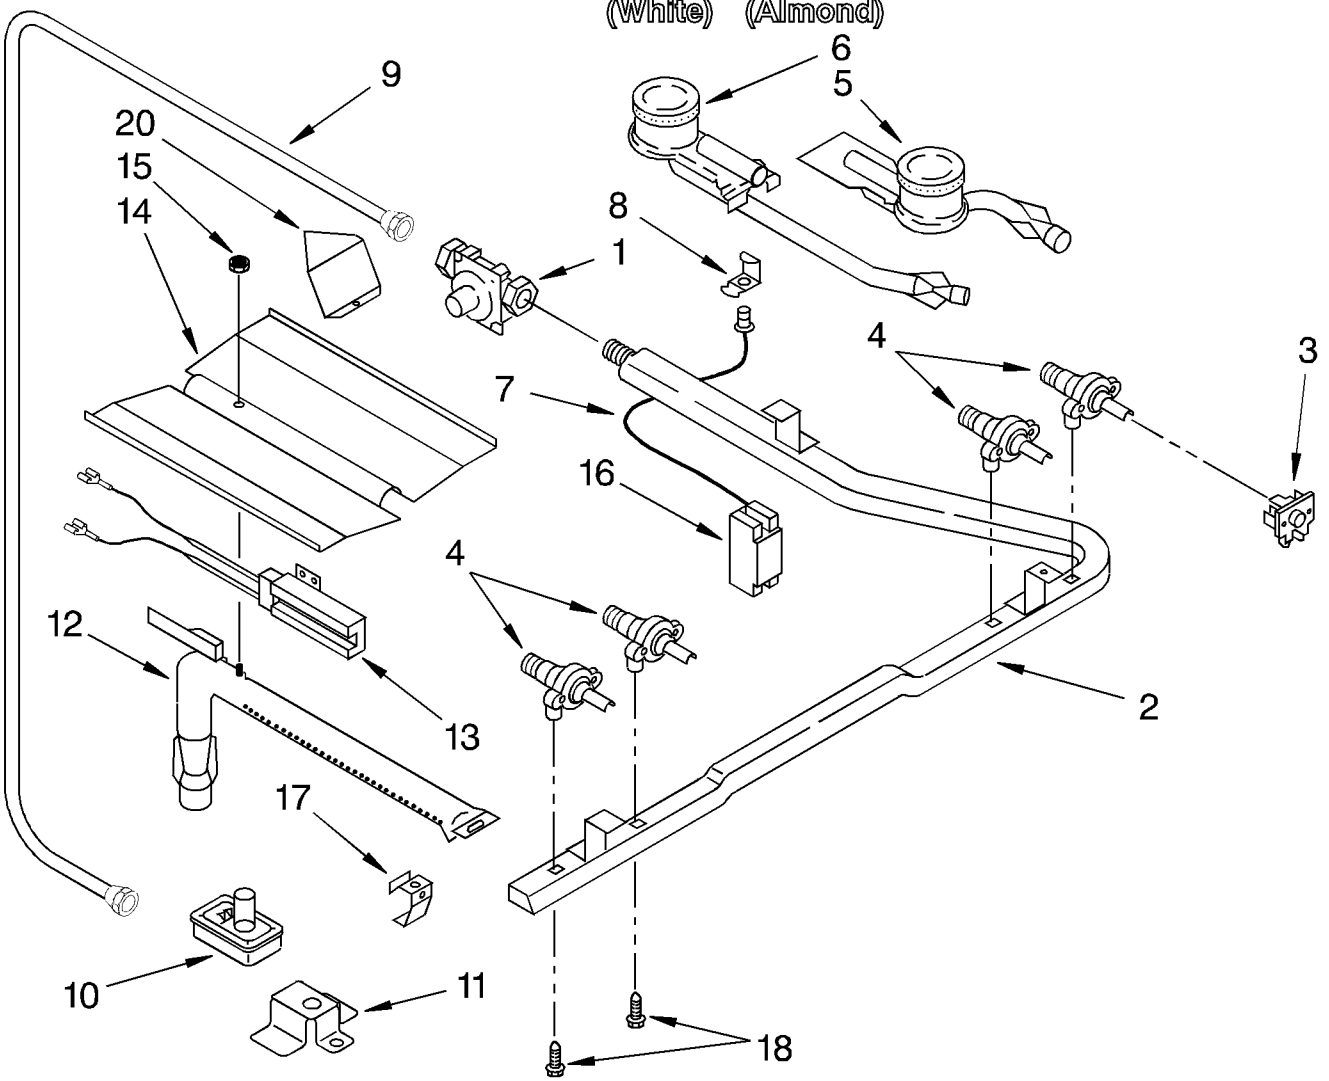

1	4371296	Regulator,Pressure
2	4371299	Pipe,Manifold
3	4371298	Switch,Ignitor(4)
4	4371297	Valve,2 pos(4)
5	4371480	Burner,Front(2)
6	4371481	Burner,Rear(2)
7	4371017	Ignitor,Base(2)
8	4371242	Retainer,Ignitor
9	4371312	Tubing,Alum 3/8
10	4371313	Valve,Safety
11	4371470	Bracket,Valve
12	4371284	Burner,Oven
13	816625	Ignitor,Oven
14	4371280	Baffle,Oven Burner
15	816642	Nut
16	4371030	Module,Spark
17	4371069	Brkt,Oven Burn Sup
18	4371027	Screw,Valve Mtg
20	4372095	Shield, Ignitor

DOOR AND BROILER PARTS

For Model: FGP335BW1, FGP335BL1
(White) (Almond)

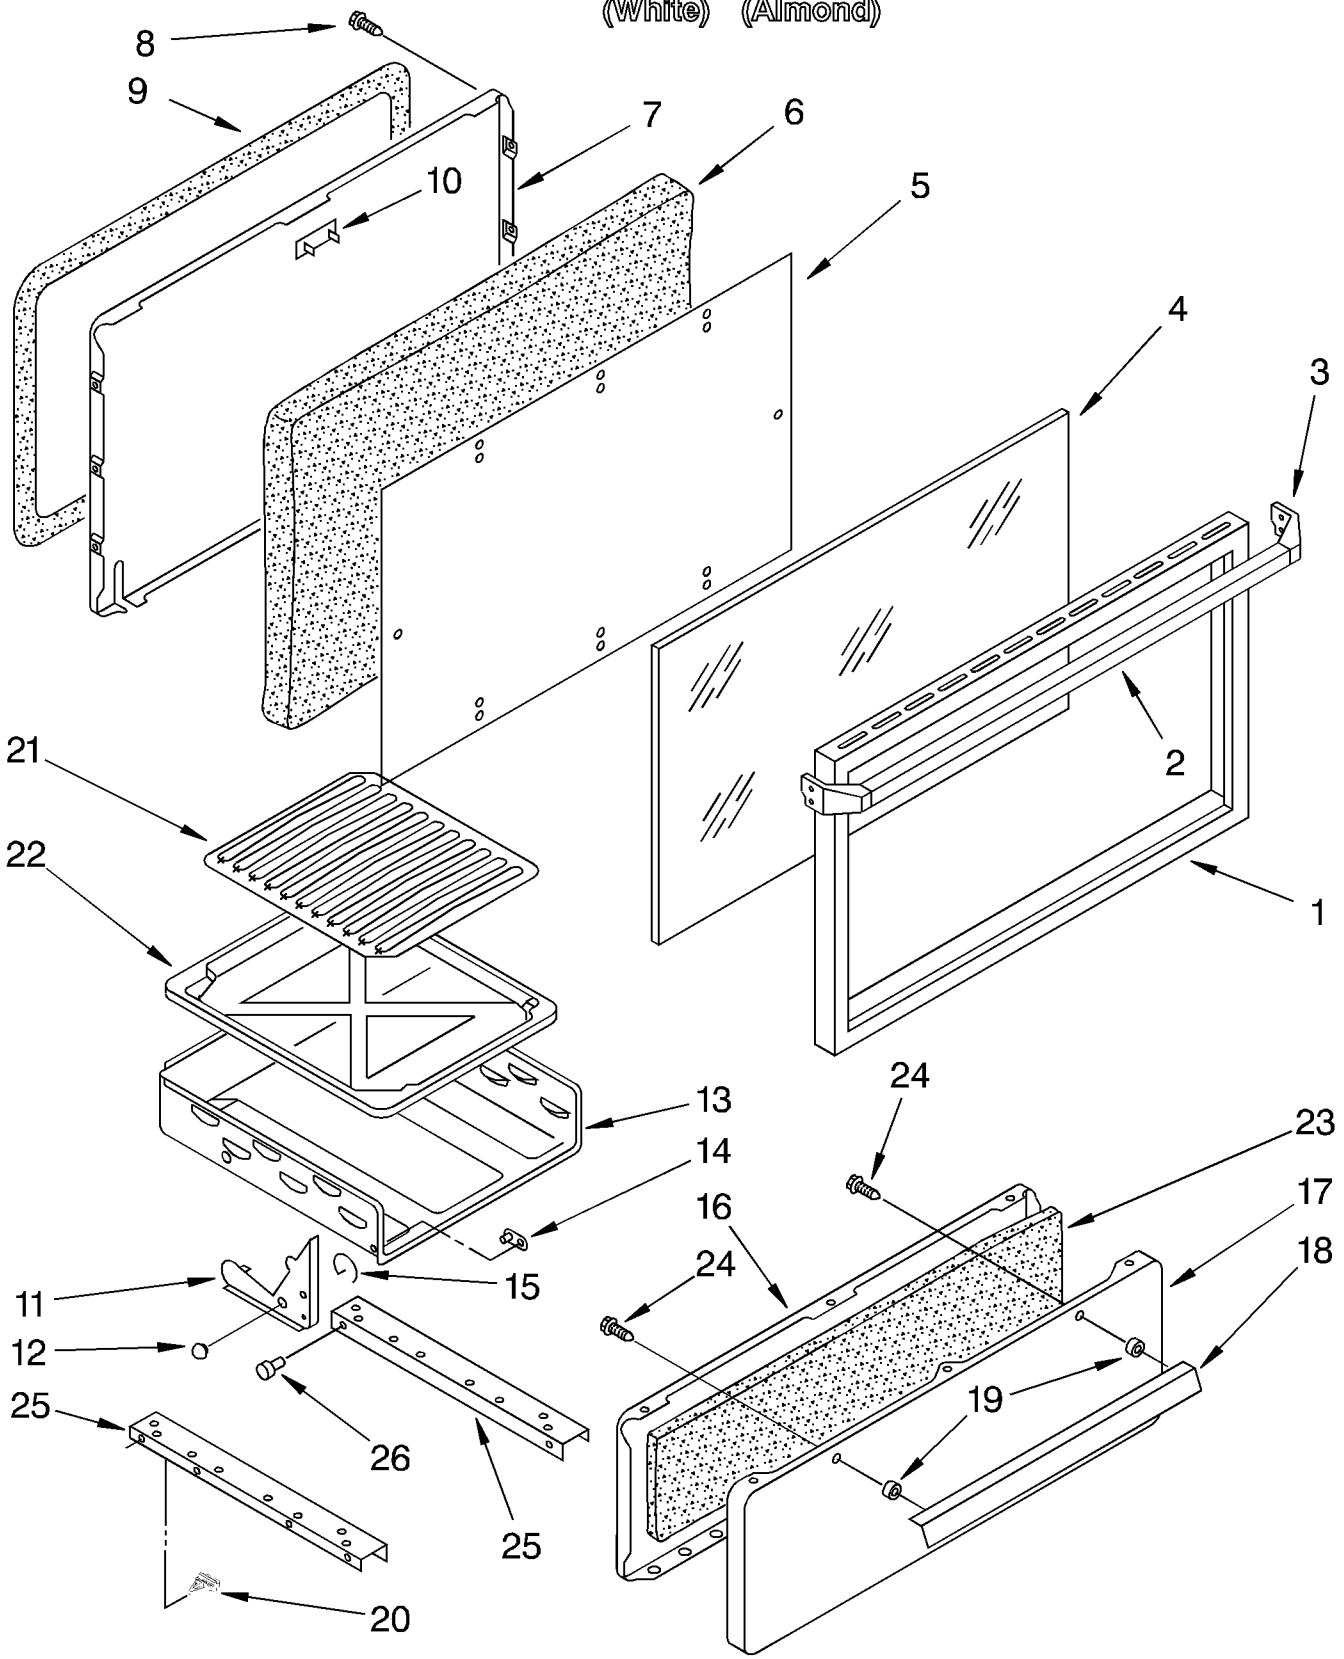

1	816688	Trim,Oven Door
2	4371086	Handle, Door
3	4371074	Endcap(2)
4	4371478	Glass,Door Blk
5	4371046	Shield,Heat
6	4371126	Insulation
7	4371044	Liner,Oven Door
8	4371100	Screw,Handle(2)
9	4371128	Seal,Door
10	4371125	Cover,Door
11	4371113	Bracket,Hinge LH
	4371114	Bracket,Hinge RH
12	4371117	Fastener,Push Nut
13	4371116	Body,Broiler
14	4371121	Pin,Hinge
15	4371122	Spring,Broiler LH
	4371123	Spring,Broiler RH
16	4371120	Liner,Broiler Door
17		Panel,Drawer
	816754	White
	4371130	Almond
18	4371118	Handle
19	816713	Fastener,Spacer
20	4371084	Glide,Drawer
21	816626	Grid,Broiler
22	816644	Pan,Broiler
23	4371119	Insulation
24	4371063	Screw (2)
25	4371077	Track, Upper (2)
26	4371115	Button,Glide

OVEN PARTS

For Model: FGP335BW1, FGP335BL1
(White) (Almond)

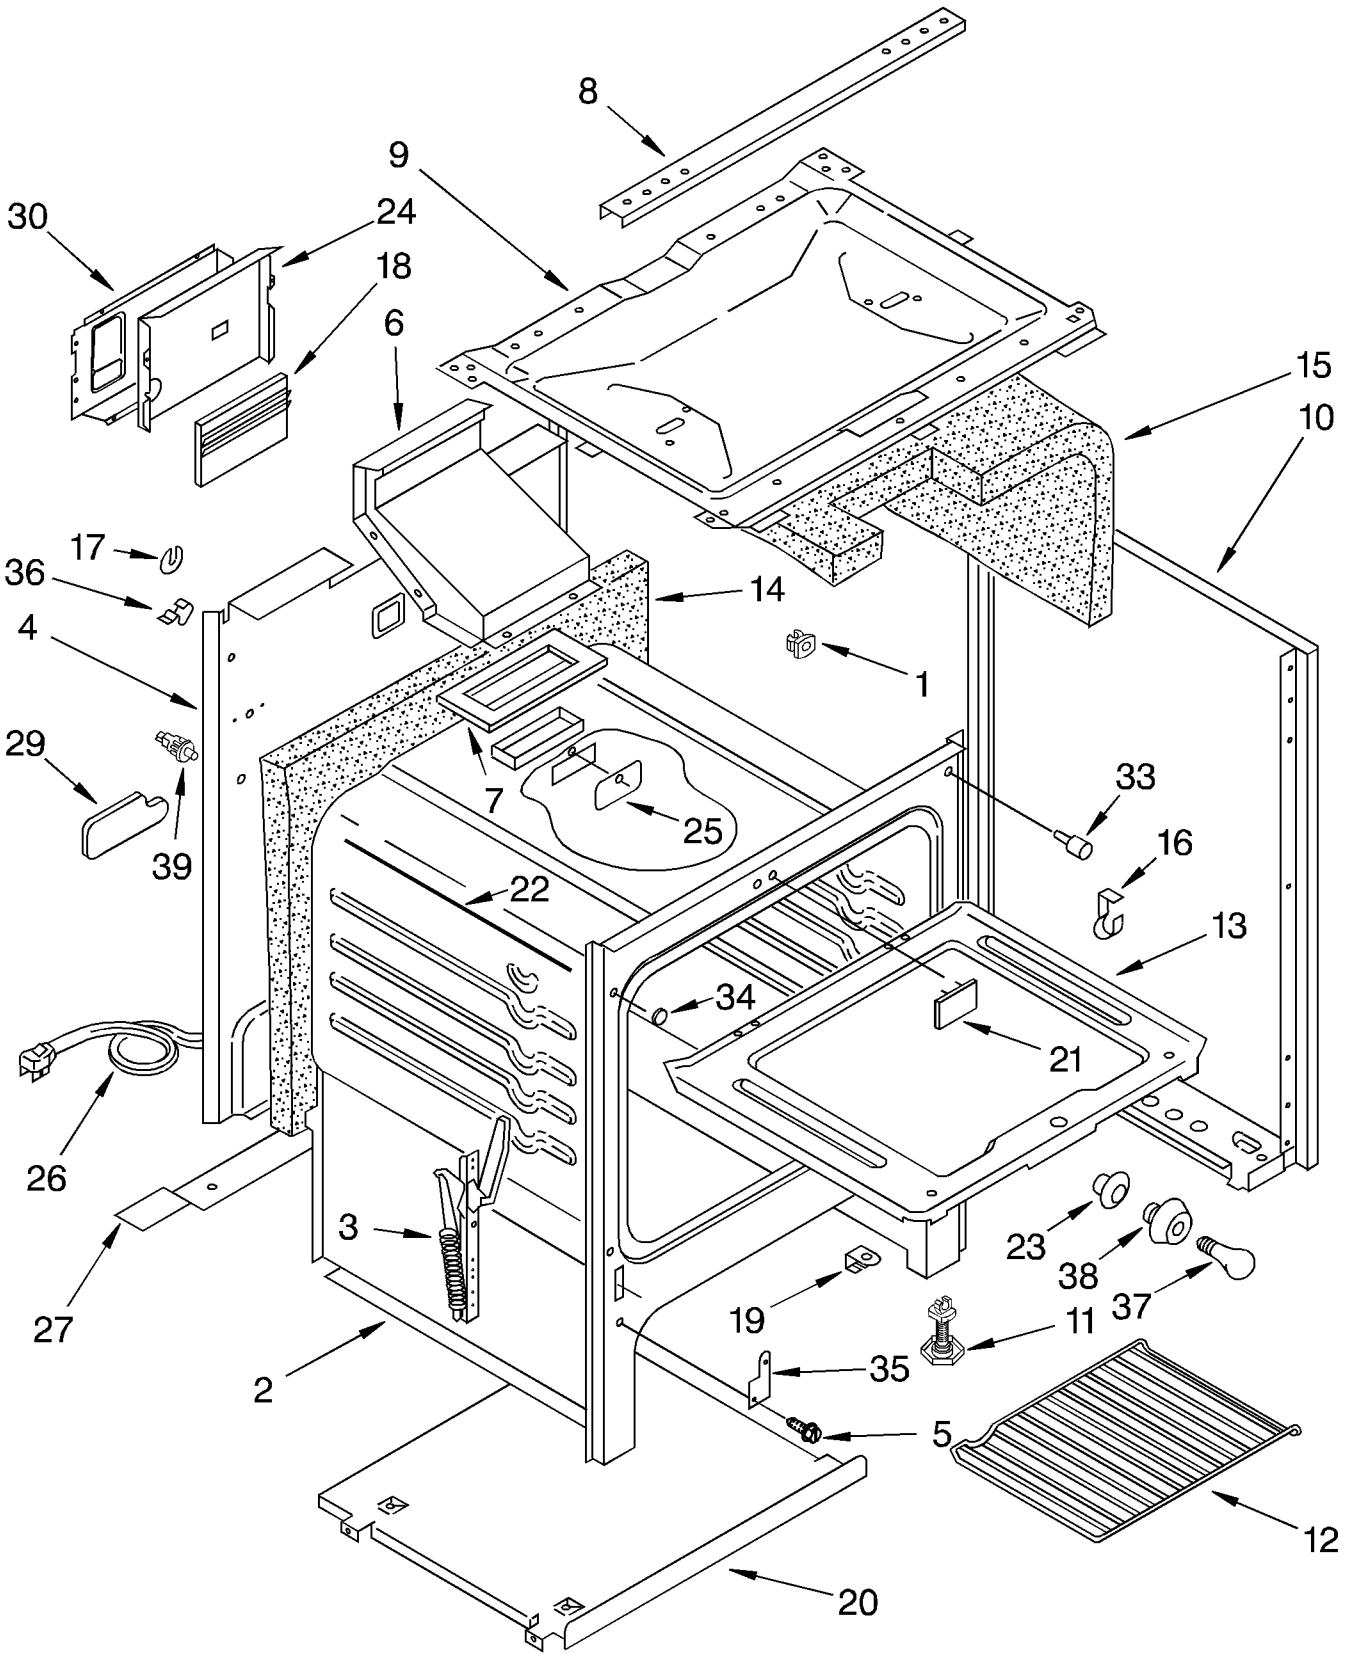

1	816669	Spacer,B/S(8)
2		Liner,Oven (Not a Serviceable Part)
3	4371087	Channel,Door Hinge
4	816581	Back,Main
5	816651	Screw,Oven Bottom
6	4371291	Flue
7	816620	Gasket,Flue
8	4371471	Support,Burner
9	4371073	Burner,Box
10		Panel, Side
	816708	White RH
	816709	White LH
	816672	Almond RH
	816695	Almond LH
11	4371909	Screw, Leveler (4)
12	4371483	Rack,Oven (2)
13	4371018	Bottom,Oven
14	4371092	Insulation,Back
15	4371091	Insulation,Wrap
16	4371482	Clip,Thermo Bulb
17	4371033	Fastener,U Type
18	4371307	Cover,Flue
19	816670	Support,Oven
20	4371068	Base,Broiler
21	4371081	Cover,Front
22	816649	Rod, Light Switch
23	4371293	Housing, Light
24	4371102	Shield,Flue
25	4371080	Cover,Plate
26	816614	Cord,Power
27	816585	Bracket, Anti Tip
29	4371305	Cover, Top Rear
30	4372096	Shield,Module
33	816608	Bumper
34	816616	Cover, Rod End
35	816617	Cover, Hinge
36	816758	Clip, Wire
37	4371303	Bulb, Light
38	816668	Socket, Light
39	816671	Switch, Door